



220-240V / 50-60Hz  
IP20

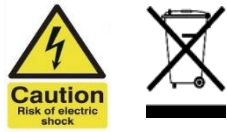


**WARNING:** Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person. **LUMINAIRES WITH EMERGENCY PACK:** When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.

<b>Terminal Labelling:</b>	
<b>Power</b>	
L1	Switched Live
E	Earth
N	Neutral
<b>Emergency</b>	
L2	Unswitched Live
DA/AT3	DALI Autotest
DA/AT3	DALI Autotest
<b>Dimming</b>	
-D1/DA	Analogue/DSI/DALI
+D2/DA	Analogue/DSI/DALI
L3	Switch Dim / Corridor Function


1.

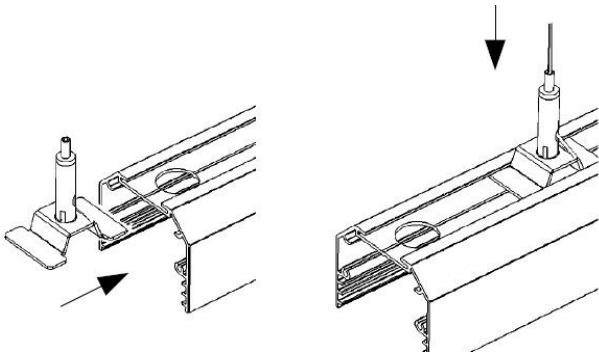


2.

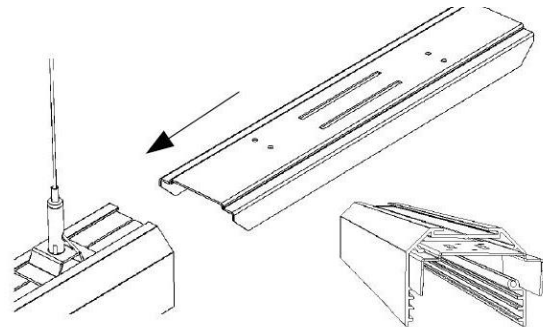

3.

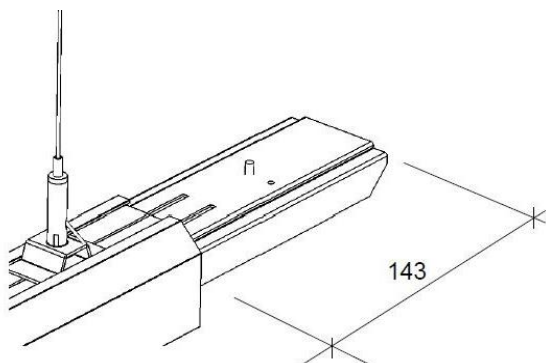


4.

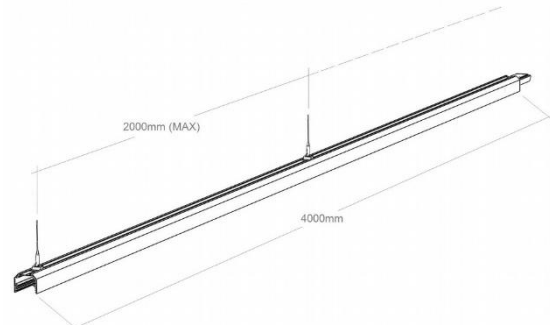

Each 4m length must have at least 2x suspension points.


Ensure suspension centres DO NOT exceed 2m.

5.

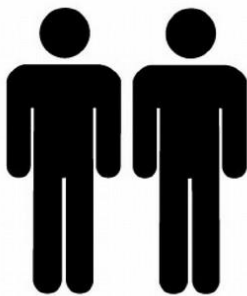

This is a two person installation. Do not attempt with less than two people.

6.

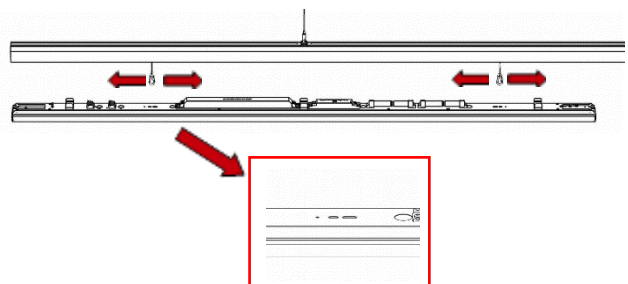

Slide tethers within trunking so they align with features on the fitting.

## Sequent Installation

<p>7.</p>	<p>8.</p> <p><b>On start of run only</b> – Slide earth bracket into trunking. Tighten central screw until it bites trunking. Connect earth tail into vacant earth on the fitting. (Earth bracket with lead supplied separately!)</p>
<p>9.</p> <p>Raise fitting into trunking, ensuring there are no trapped cables and that all spring clips are <b>fully engaged</b>.</p>	<p>10.</p> <p>Take the next fitting - repeat step 1 + 2, then make loom connection. Repeat step 4, folding loom to avoid trapping cables.</p>
<p>11.</p> <p>Check that fittings are touching end to end with <b>no gaps</b>, and ensure fitting is <b>engaged evenly</b> into trunking along its entire length.</p>	<p>12.</p> <p><b>Failure to complete step 6 correctly may result in faulty installation with potential of fittings disengaging from trunking.</b></p> <p><b>Alignment and level is the responsibility of the installer.</b></p>
<p><u>Maintenance</u></p> <ol style="list-style-type: none"> <li>① Disconnect luminaire before undertaking any maintenance or cleaning.</li> <li>② Cleaning should be undertaken on external parts of the luminaire only using a slightly damp lint free cloth.</li> <li>③ To access LED circuits use a pan pozi screwdriver to remove endcap, then slide diffuser out.</li> <li>④ Use a pan pozi screwdriver to remove components.</li> <li>⑤ Please contact Dextra for assistance with spare component supply.</li> </ol>	