Capo / Capo XL Installation



220-240V / 50-60Hz IP20

Terminal Labelling:

Power L1 E

Switched Live Earth Neutral

L2 DA/AT3 DA/AT3 Dimming -/D1/DA +/D2/DA L3 Neutral
Unswitched Live
DALI Autotest
DALI Autotest


nming
1/DA Analogue/DSI/DALI
02/DA Analogue/DSI/DALI
Switch Dim /
Corridor Function










WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer itself or his service agent or a similar qualified person. LUMINAIRES WITH EMERGENCY PACK: When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.

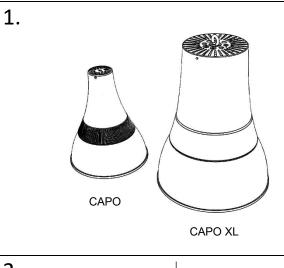

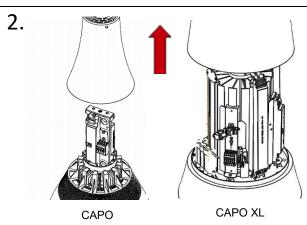



<remove cover screws for access>

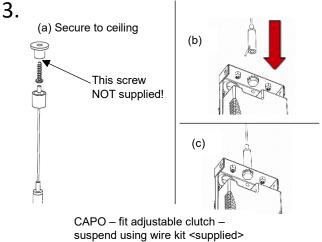

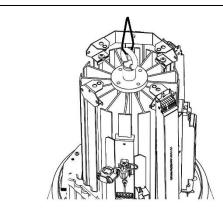

CAPO XL – suspend via eyebolt using Gripple wire <supplied> NOTE – method of attachment to ceiling determined by installer!

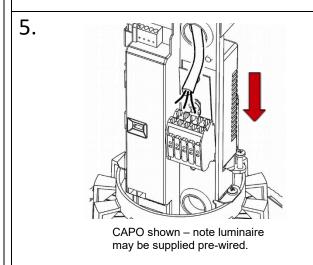


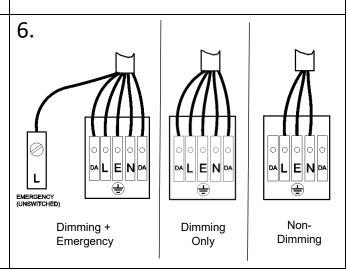

4.

Capo / Capo XL Installation



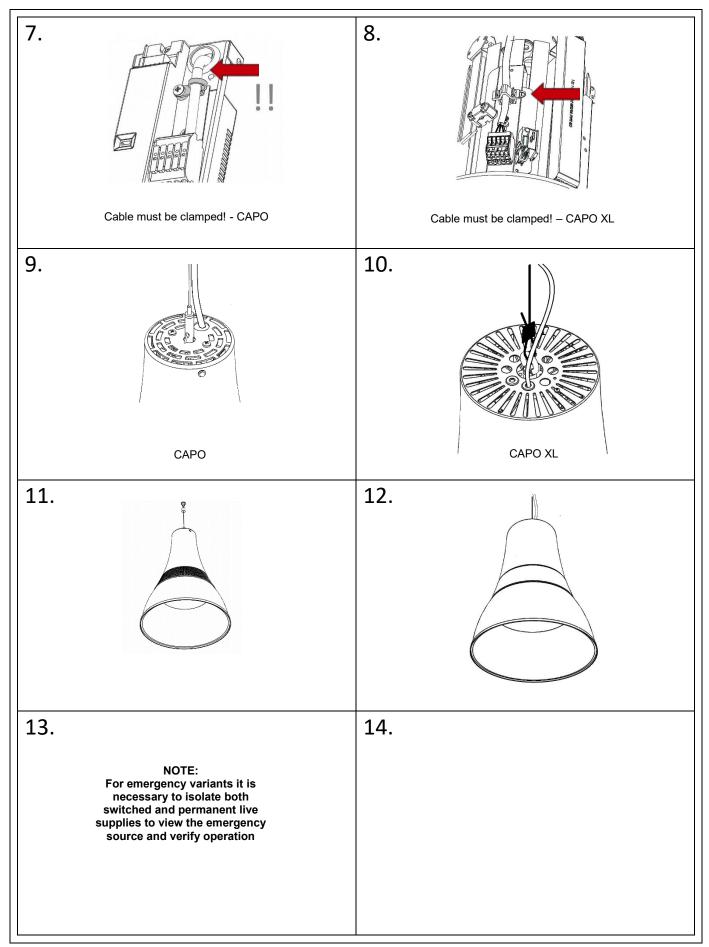

Capo / Capo XL Installation



Maintenance Disconnect luminaire before undertaking any maintenance or cleaning. Cleaning should be undertaken on external parts of the luminaire only using a slightly damp lint free cloth. To remove cover use a pan pozi screwdriver to remove screws from top of fitting. If replacing the LED circuit make sure to remove all thermal paste from all mating surfaces and reapply. Use a flat headed screwdriver to lever the LED safety cover up. Use a pan pozi screwdriver to remove (6) screws from the outer ring on LED circuit. Module To remove screws from LED circuit (7) 000 use a torx screwdriver. Battery Use a pan pozi screwdriver to remove (8) components. 9 Please contact Dextra for assistance with spare component supply.