Opus Column Installation



220-240V / 50-60Hz IP65 IK09

Terminal Labelling:

4

Switched Live Earth Neutral

DA/AT3 DA/AT3 Dimming -/D1/DA +/D2/DA


Unswitched Live

DALI Autotest DALI Autotest Analogue/DSI/DALI Analogue/DSI/DALI Switch Dim / Corrido Function **6** €






WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person. LUMINAIRES WITH EMERGENCY PACK: When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.

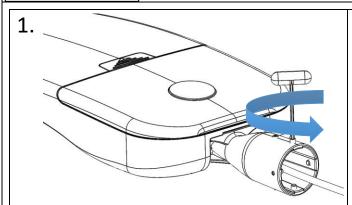


Using a 4mm Allen Key, loosen all the grub screws sufficiently to allow for the column diameter.

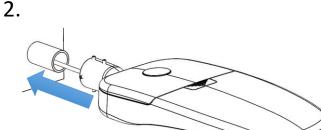


Feed the mains cable into the column and offer the spigot up to the column.

3.

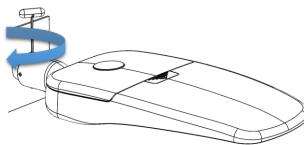


Using the 4mm Allen Key, tighten all the grub screws slightly so the fitting can still rotate.

4. Press the lid release button and lift the lid to expose the internal spirit level. Once the fitting is level, fully tighten the grub screws to 11Nm.

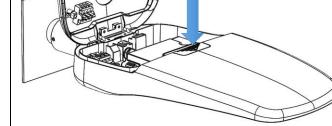


5.

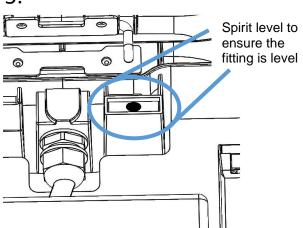


6. To close the lid, apply force to the centre and always check that the lid has been closed properly.

The release button should sit flush with the housing when closed.

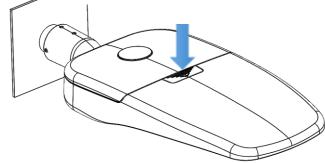

Opus Column Installation



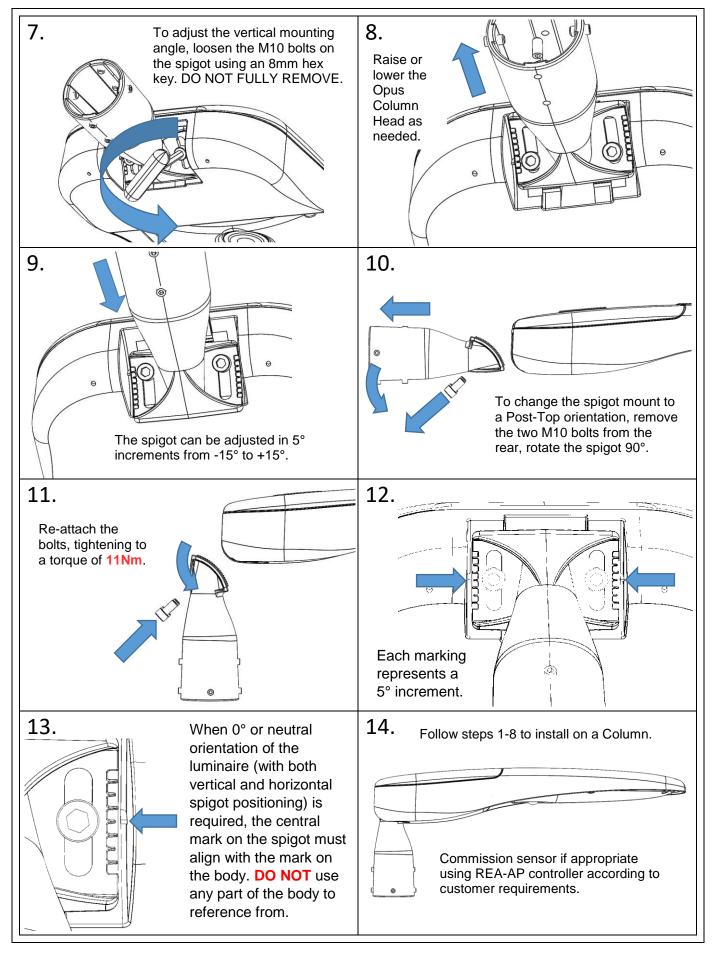

Opus Column Installation



