


PRODUCT SPECIFICATION





RUNWAY RGBW

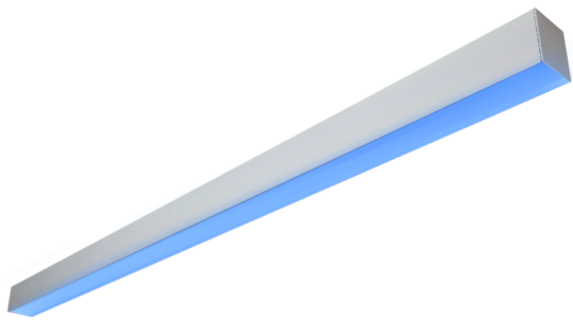

INTRODUCTION

Where lighting must fulfil both architectural and practical purposes the Runway RGBW provides a slim line appearance suitable for surface, suspended or recessed installation with full RGBW performance. It has an extruded aluminium housing in 2000mm lengths and is available in three colour options, grey, black or white. With RGBW performance, the Runway RGBW can be adjusted to suit any corporate theme or event creating an attractive environment for employees or to entice customers.

The Runway RGBW incorporates the latest mid-power LEDs to ensure optimal energy-efficiency with minimal maintenance over its entire lifetime. The Runway RGBW is DALI compatible allowing simple adjustment of each channel to create any desired colour whilst the white circuit ensures it is still a capable functional light source when required.

			
--	---	---	---

RUNWAY RGBW - APPLICATION

- Education
- Healthcare / Social Housing
- Hotel / Leisure
- Office
- Retail

RUNWAY RGBW - SPECIFICATION

CONSTRUCTION

- Housing: Extruded aluminium
- Finish: Polyester powder painted BS 00E55 matt white 60% gloss
- Finish: Polyester powder painted RAL 9006 matt grey
- Finish: Polyester powder painted RAL 9005 matt black
- Endcaps: High pressure die cast aluminium
- Diffuser: 2mm extruded high transmission opal polycarbonate
- IP20

ENVIRONMENTAL

- Designed to allow simple replacement of components with commonly available tools in compliance with the Eco Design Directive, please see the installation leaflet for maintenance instructions.
- All critical components are mounted on a single tray for simple end of life repair or upgrade.
- Powered by European branded drivers and emergency modules ensuring replacement parts are easily sourced.
- Every luminaire is labelled with a unique ID number allowing easy identification of spare parts for the lifetime of the product.
- Contains no single use plastics or polystyrene packaging.
- Supplied in plain card boxes with paper tape ensuring packaging is easily recycled.
- Designed to allow simple disassembly for end of life recycling.
- UK based manufacturing providing local support throughout the product lifetime and minimising transportation miles.

EMERGENCY

- Not available with emergency

CONTROL

- RGBW Colour Changing

INSTALLATION

- Suitable for surface installation

VARIATIONS

- Available in a range of housing sizes and lumen outputs
- Available in white, black or grey finishes

PERFORMANCE

- Red / Blue / Green channels allow for full colour change. White channel supplied in 4,000k as standard, other colour temperatures available on request. Please note RGB and W channels must be operated separately.


RUNWAY RGBW - IMAGES




Runway RGBW 2000mm grey




Runway RGBW 2000mm recessed

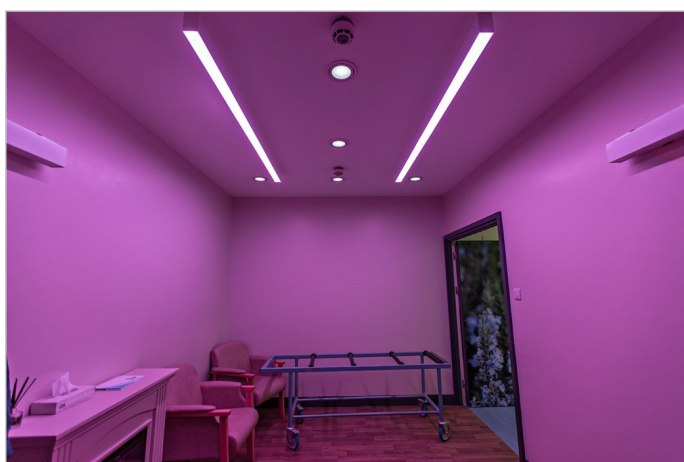


IMG_0976(web)

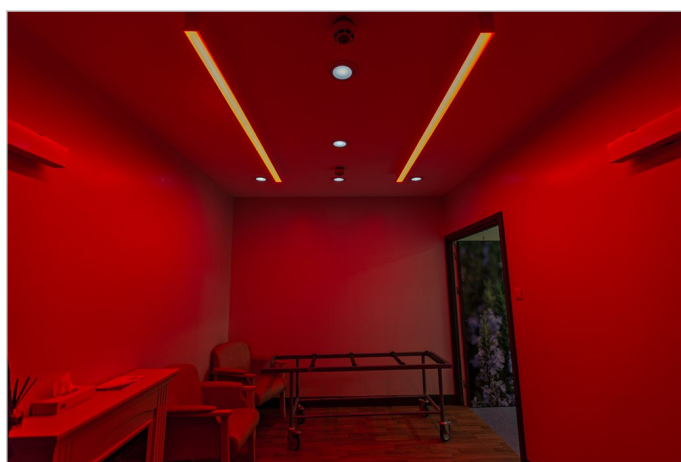


IMG_0973(web)

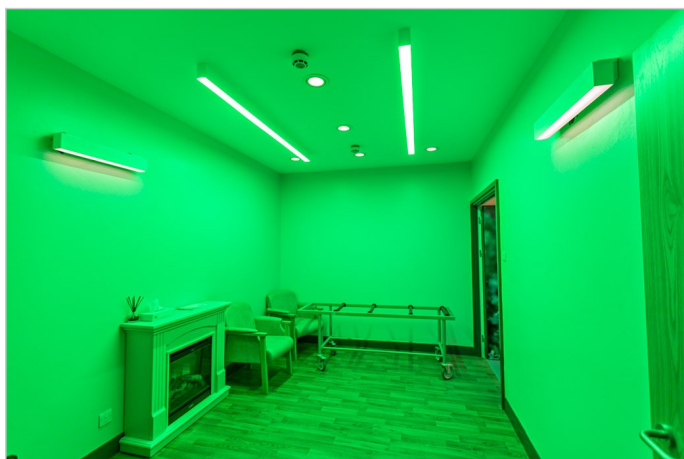

IMG_0899(web)

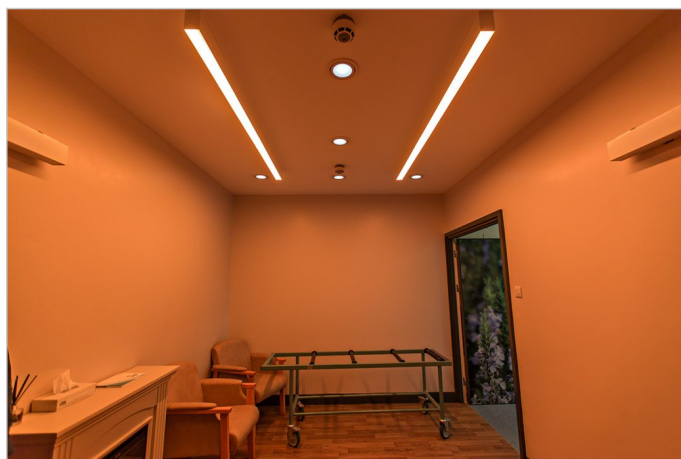


IMG_0970(web)

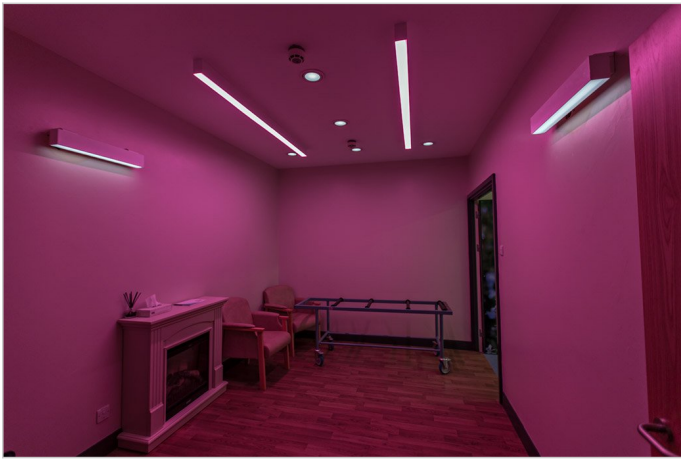

IMG_0902(web)



IMG_0905(web)

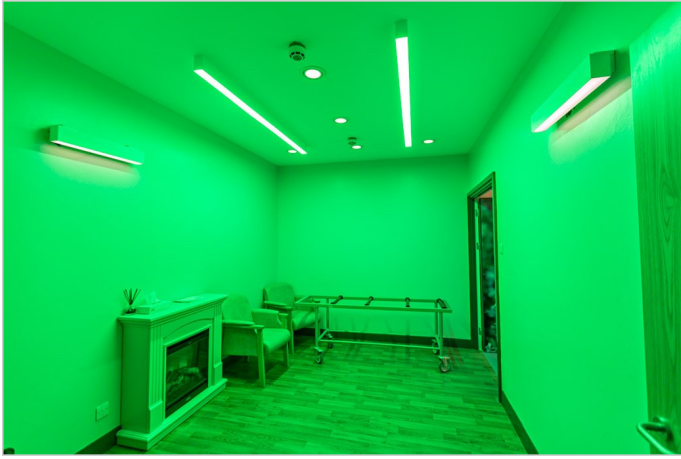


IMG_0899(web)




IMG_0908(web)

RUNWAY RGBW - TECHNICAL

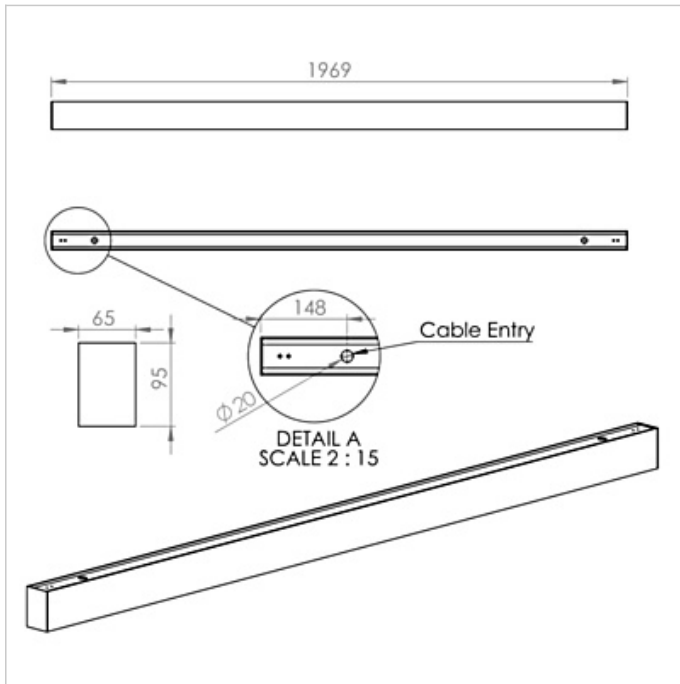

Runway RGBW 2000mm

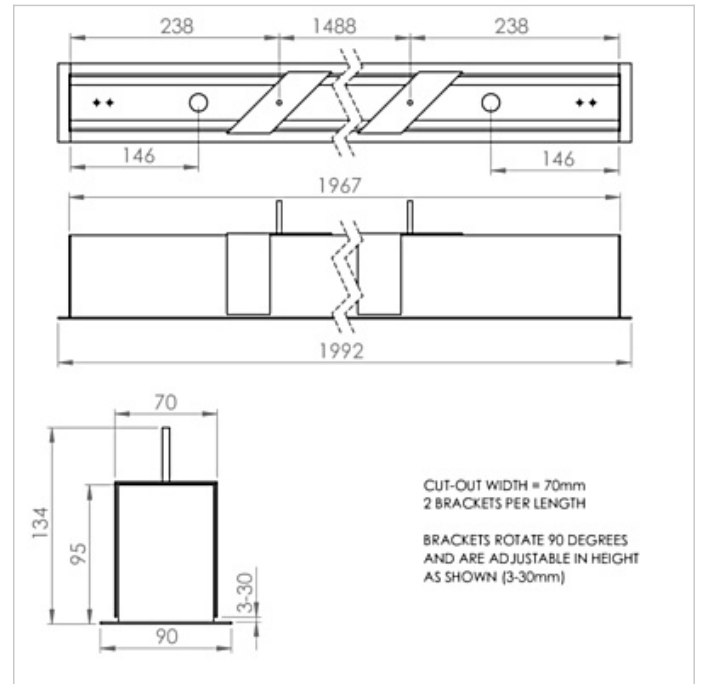

Runway RGBW 2000mm Recessed

RUNWAY RGBW - WARRANTY

At Dextra our commitment to service has been at the forefront throughout our history spanning more than forty years in the UK lighting market. Our service ethos extends beyond design and delivery, we believe supporting your installation throughout the warranty period is equally crucial, whilst the strength and longevity of Dextra Group provides peace of mind that our warranty will be supported throughout.

The Dextra range is supplied with a five year warranty commencing from the date of delivery. During the first three years defects will be repaired on site and the warranty will include both parts and labour. For the final two years drivers, emergency modules, wireless modules, sensors and LED circuits will be supplied free of charge to replace defective components, labour and other associated costs are not included.

Certain ranges and components are subject to exemptions:

- Lithium batteries are provided with a five year warranty. During the first three years defects will be repaired on site and the warranty will include both parts and labour. For the final two years replacement batteries will be supplied free of charge to replace defective components. Five year warranty became effective as of 03/02/25, Lithium emergency luminaires supplied prior to this date are supported with a three year on site warranty only. Labour and other associated costs are not included. Nickel Metal Hydride and Nickel Cadmium batteries are provided with a one year warranty for parts and labour.
- Emergency luminaires including AME LED, EXI LED, EXI2 LED, EXI Track, HBE LED, HBE2 LED, OAT2 LED, OEZ LED and Twinspot are supplied with a one year warranty for parts and labour. Lithium variants suffixed with the 5YR part code, the Autotest emergency with the LA3 part code and wireless variants with LA3RC or LSTR part codes are supplied with a five year warranty. For these extended warranty variants for the first three years defects will be repaired on site and the warranty will include both parts and labour. For the final two years replacement batteries will be supplied free of charge to replace defective components.
- Protec Micro, PTECF7 Fire Rated Downlights, Serenus and the Opus Sconce are provided with a five year replacement luminaire only warranty. Protec FR Fire Rated Downlights are provided with a 2 year replacement luminaire only warranty.
- Controls systems such as standalone sensors, switches, marshalling boxes and cabling are provided with a one year warranty for both parts and labour. DALI control systems are provided with a two year warranty for both parts and labour.
- LEDextra ranges are supplied with a three year parts or replacement luminaire only warranty with the exception of the IMPR RGBW, the Runway RGBW, the MOD RGBW, Tanek RGBW and the DexRing. These five ranges are supplied with our standard five year warranty during which defects within the first three years will be repaired on site and the warranty includes both parts and labour. For the final two years free of charge replacement components only will be supplied to rectify any failures but labour and other associated costs are not included.
- LEDEX ranges are supplied with a three year replacement luminaire only warranty.

- The Decorative Pendant ranges, Bebo, Dene, Nova, Fino and Stix are supplied with a 3 year replacement luminaire only warranty.

All warranties are subject to correct use of the product and will be invalidated by misuse, for example incorrect installation, unsuitable environmental conditions or incorrect maintenance. It is the duty of the customer to ensure that all the fault lies with the luminaire prior to requesting replacement parts or site repairs. In the event that no defect is found with the product our costs for attending site will be recharged to the customer and credit will not be issued against returned products. No consequential losses incurred resulting from any defect with our product will be reimbursed.

Given the nature of LED technology a small percentage of LEDs may fail during the lifetime of a luminaire, this does not cause a reduction in lumen output. As such LED luminaires are only deemed to be faulty for warranty purposes when in excess of ten percent of LEDs have failed in a single luminaire.

On site repair of products under warranty will be undertaken during normal working hours, 9am to 5pm Monday to Friday, and will require unrestricted access to luminaires. Where required Dextra will provide access equipment to carry out repairs at height, should luminaires have been installed in locations where reasonable provision for maintenance access has not been made we reserve the right to supply replacement product only. On site warranty repairs will only be undertaken on the mainland of the UK and Ireland, in all other locations replacement product only will be provided.

If you require any assistance with regards to our products please contact our Customer Services department on 01747 858100.

RUNWAY RGBW - ORDER CODES

LUMINAIRE CODES

Code	Description	Power (C84)	Luminous Flux
RWY 2000 RGBW L60 OP	Runway, 2000mm, 3,642lm, Surface / Suspended, Opal, RGBW / Colour 84	36.0W	765lm Red, 1,482lm Green, 716lm Blue, 6,605lm RGB White
RWYR 2000 RGBW L60 OP WH	Runway, 2000mm, 3,642lm, Recessed, Opal, RGBW / Colour 84	36.0W	765lm Red, 1,482lm Green, 716lm Blue, 6,605lm RGB White

CONTROL

Code	Description
RLI	Reacta-Link, Wireless Enabled Luminaire
RC	Reacta-Control, Wireless Enabled Luminaire

MISCELLANEOUS

Code	Description
WH	White Finish
BL	Black Finish
GY	Grey Finish
RWY SMK	Runway Surface Mount Kit
SUSP RWY 3M BF X1	Runway 3m Suspension Kit One Drop
RWY INSTALL KIT	Runway Installation Kit
LSF	Low Smoke Zero Halogen

Runway RGBW Suspended Installation


220-240V / 50-60Hz
IP20



Terminal Labelling:

Power	
L1	Switched Live
E	Earth
N	Neutral
Emergency	
L2	Unswitched Live
DA/AT3	DALI Autotest
DA/AT3	DALI Autotest
Dimming	
-D1/DA	Analogue/DSI/DALI
+D2/DA	Analogue/DSI/DALI
L3	Switch Dim / Corridor Function





WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source is non replaceable. **LUMINAIRES WITH EMERGENCY PACK:** When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.

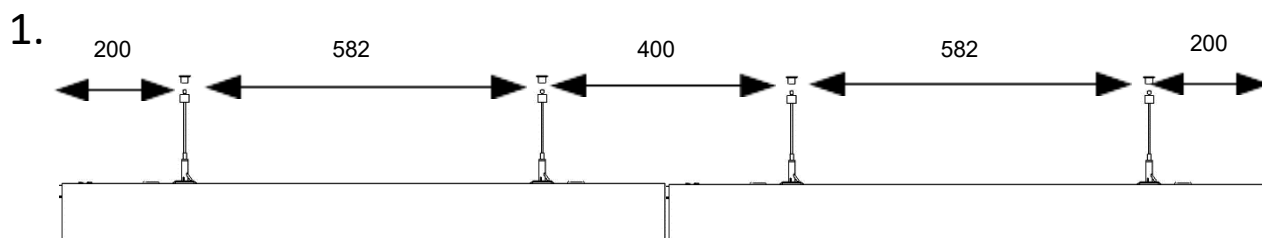


Caution:

All red, green and blue can be run at the same time, however white can only be run with one additional colour. The fitting must not run all 4 colours at the same time. Drivers come programmed to prevent operation above 50% output when not connected to a DALI system, however commissioning will reset these values, we strongly recommend these values are programmed during commissioning to prevent overheating should the DALI system fail.


Under no circumstances should the LEDs in this luminaire be viewed directly, only illuminate this product with the diffuser installed. Directly viewing the LEDs in this luminaire has the potential to damage eyesight.

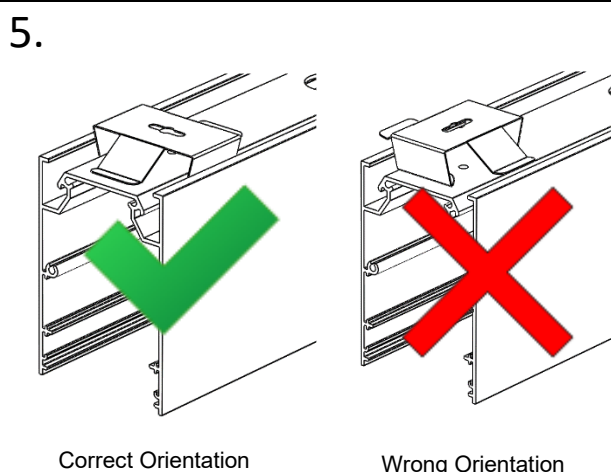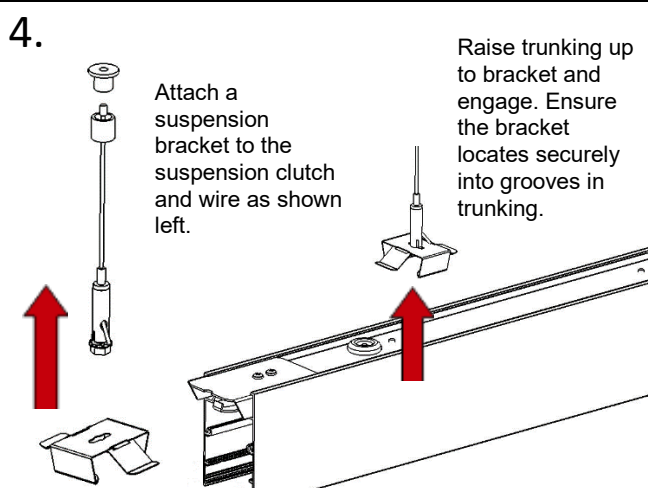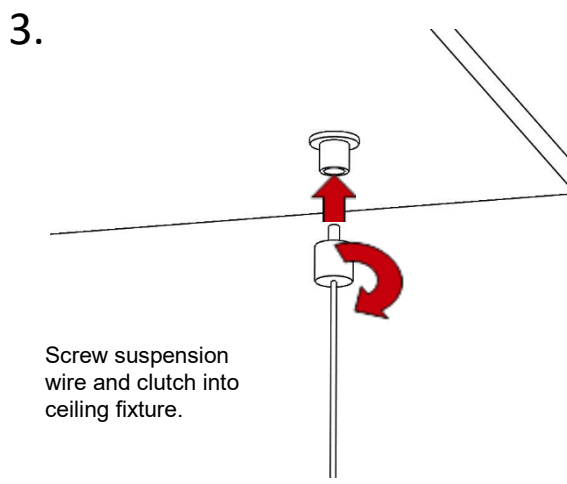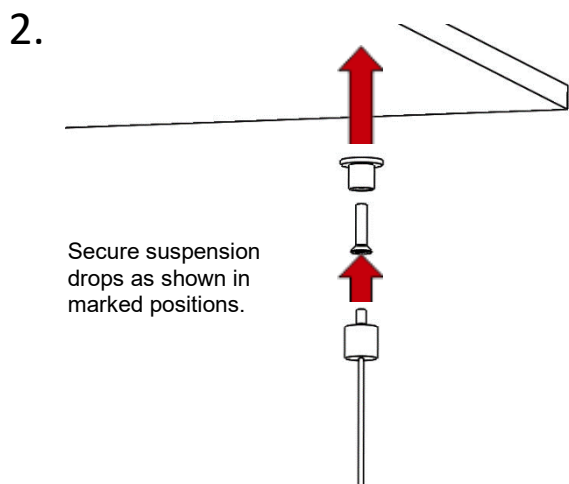


6. The trunking with this bracket inside is the starter trunking and must be the first piece installed. The last section of trunking (in a closed loop) to join to this must be a corner.

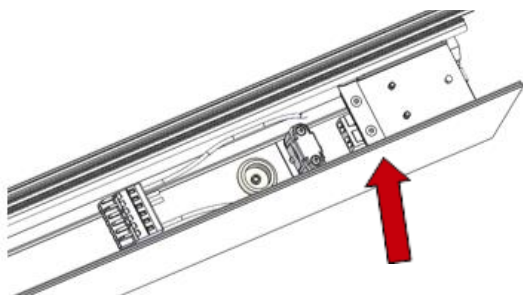

7. Open the starter bracket to allow access to the terminal block.

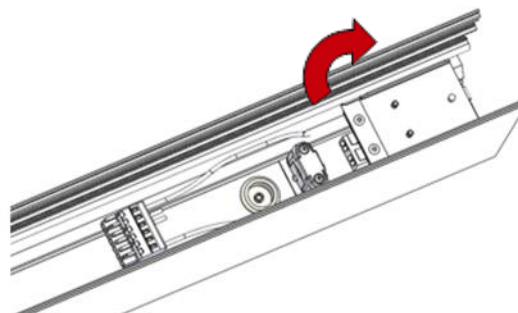


8. Feed mains cable in through grommet in rear of trunking. Wire into marked terminals as required.

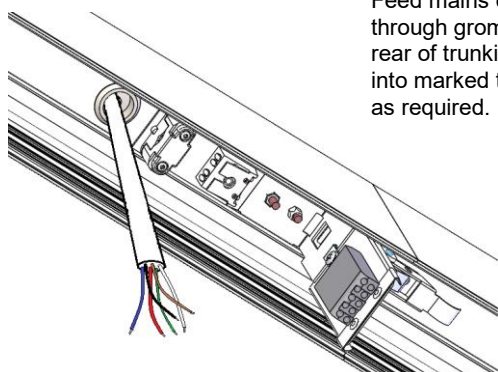


- 9.
-


10. Fold starter bracket back into trunking. Then push bracket in to trunking.

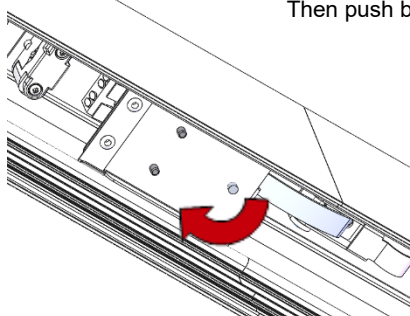


11. Locate all tether brackets and clip gear trays to each bracket in the trunking.

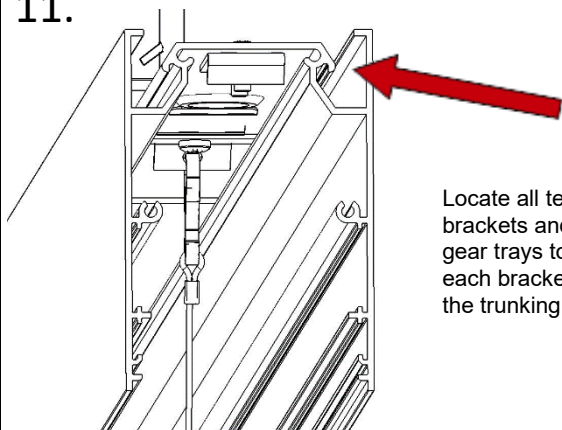


12. Clip all trays into trunking and allow the trays to hang.

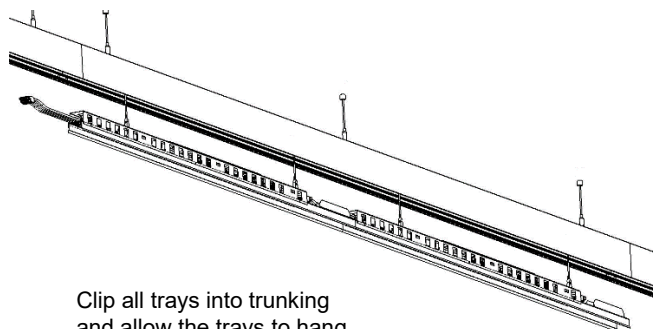

13. Connect loom from gear tray and the starter bracket.

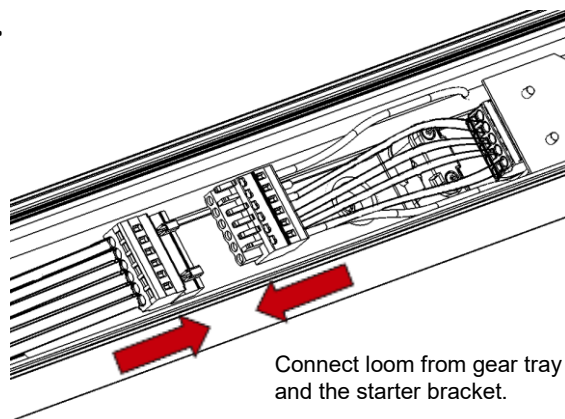


14.

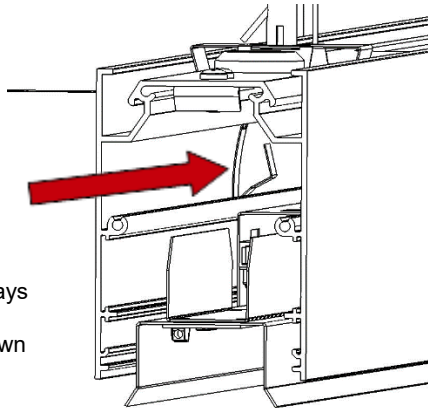

Engage gear trays onto springs in trunking as shown to the right.

15.

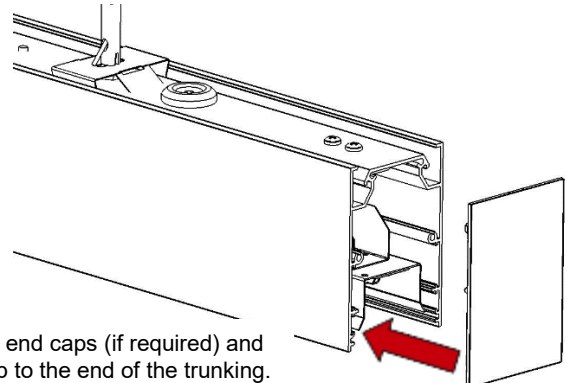

Locate end caps (if required) and offer up to the end of the trunking. End cap should slot onto trunking easily.

Caution:

All red, green and blue can be run at the same time, however white can only be run with one additional colour. The fitting must not run all 4 colours at the same time. Drivers come programmed to prevent operation above 50% output when not connected to a DALI system, however commissioning will reset these values, we strongly recommend these values are programmed during commissioning to prevent overheating should the DALI system fail.

Under no circumstances should the LEDs in this luminaire be viewed directly, only illuminate this product with the diffuser installed. Directly viewing the LEDs in this luminaire has the potential to damage eyesight.

Runway RGBW Recessed Installation


220-240V / 50-60Hz
IP20



Terminal Labelling:

Power	
L1	Switched Live
E	Earth
N	Neutral
Emergency	
L2	Unswitched Live
DA/AT3	DALI Autotest
DA/AT3	DALI Autotest
Dimming	
-D1/DA	Analogue/DSI/DALI
+D2/DA	Analogue/DSI/DALI
L3	Switch Dim / Corridor Function






WARNING: Luminaire must be earthed. Risk of electric shock from LED boards if operated with cover removed. Installation / operation outside of luminaires intended scope invalidates warranty. Suitable only for domestic / light industrial / industrial applications within the scope of EN55015. Tested to compliance with BSEN 60598: specification for general requirements and tests. Must be installed by a suitably qualified person in accordance with all relevant legislation. Ambient operating temperature of 0°C to 25°C. If maximum operating temperature is exceeded luminaire will automatically dim / switch off. Terminal blocks are rated to 16A unless stated otherwise. The light source is non replaceable. **LUMINAIRES WITH EMERGENCY PACK:** When supply is isolated battery output terminals may be live if battery is connected. Isolate mains and battery before servicing. Emergency luminaires require unswitched live connection taken from same phase as switched supply. When unswitched supply is connected status indicator illuminates green, when unswitched supply is disconnected indicator extinguishes and luminaire operates in emergency mode. 24 hour charge period required before undertaking full discharge test. Emergency test sheets provided should be used to record all emergency tests. Batteries should be replaced when 3 hour duration is not met. Excessive switching of permanent live may result in premature battery failure. Battery electrolyte can be harmful to eyes / open wounds, do not puncture, if electrolyte touches skin / eyes flush with water. Do not incinerate batteries.




Caution:

All red, green and blue can be run at the same time, however white can only be run with one additional colour. The fitting must not run all 4 colours at the same time. Drivers come programmed to prevent operation above 50% output when not connected to a DALI system, however commissioning will reset these values, we strongly recommend these values are programmed during commissioning to prevent overheating should the DALI system fail.

Under no circumstances should the LEDs in this luminaire be viewed directly, only illuminate this product with the diffuser installed. Directly viewing the LEDs in this luminaire has the potential to damage eyesight.

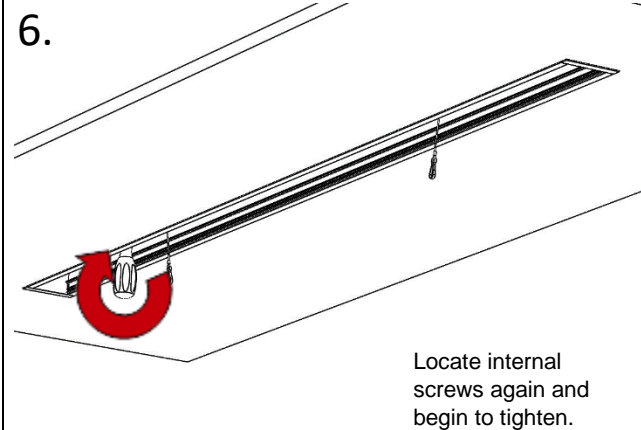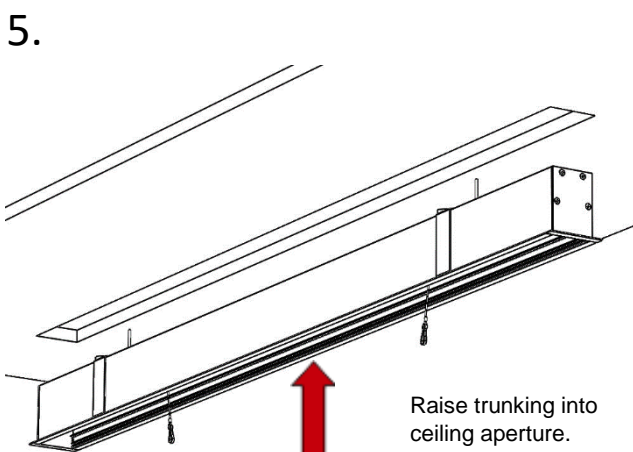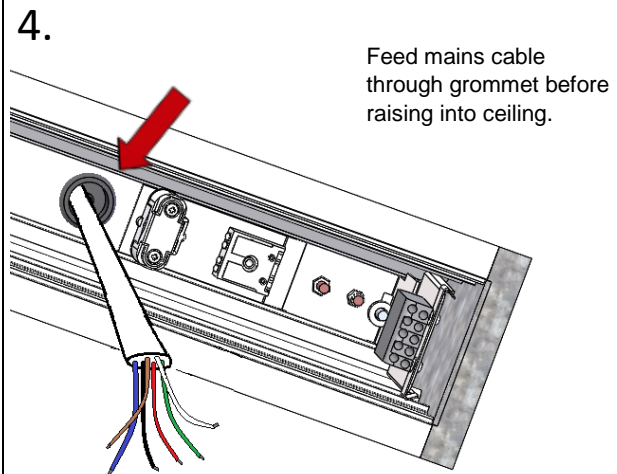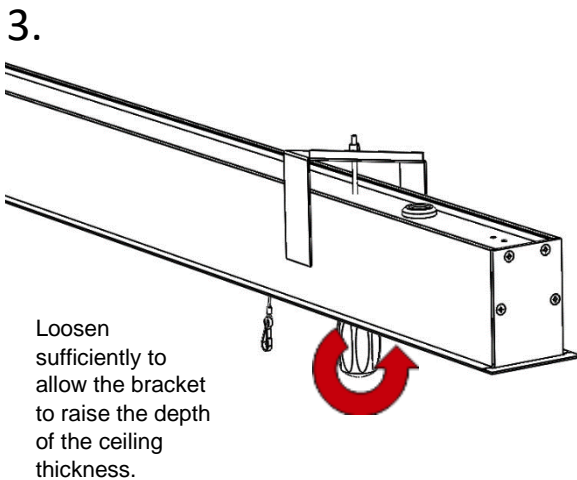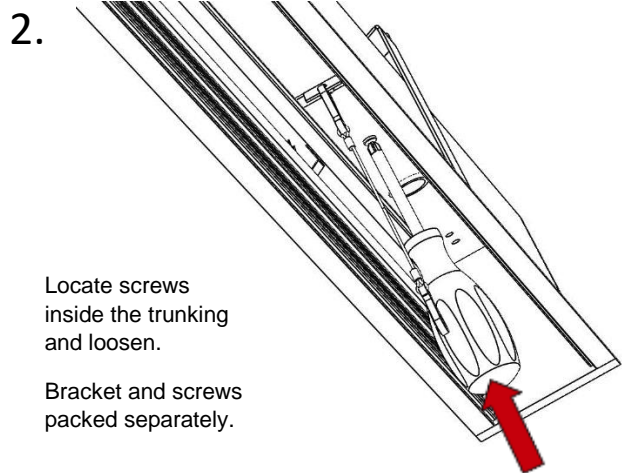


7.

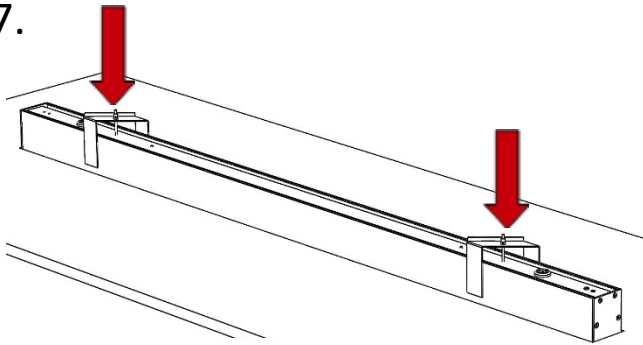


As the screws are tightened, the brackets will rotate and tighten against the rear of the ceiling.

8.

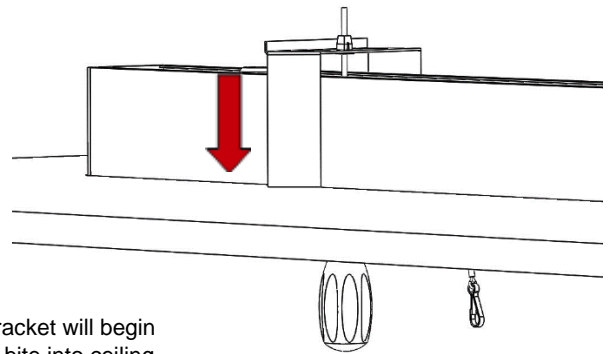


Bracket will begin to bite into ceiling.

9.

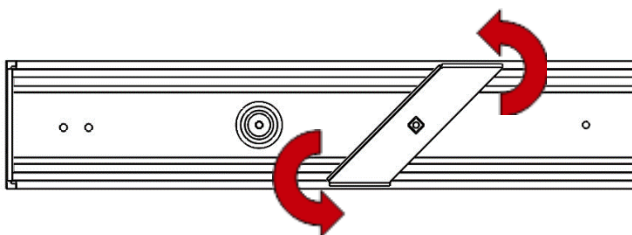


Bracket beginning to rotate.

10.

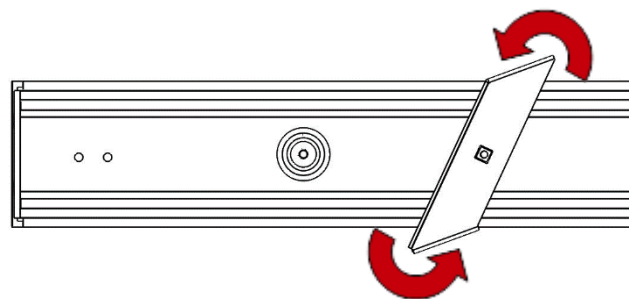


Bracket will rotate as shown as screw is tightened.

11.

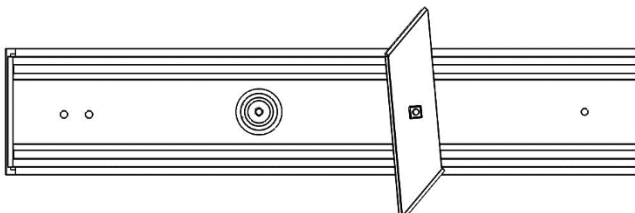


Bracket fully rotated.

12.

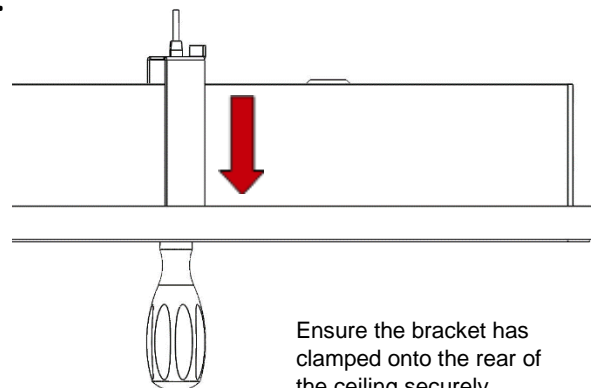


Ensure the bracket has clamped onto the rear of the ceiling securely.

13.

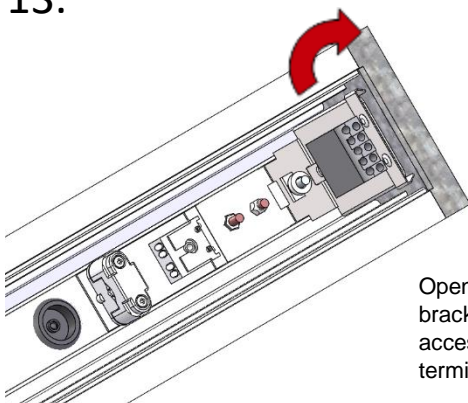


Open the starter bracket to allow access to the terminal block.

14.

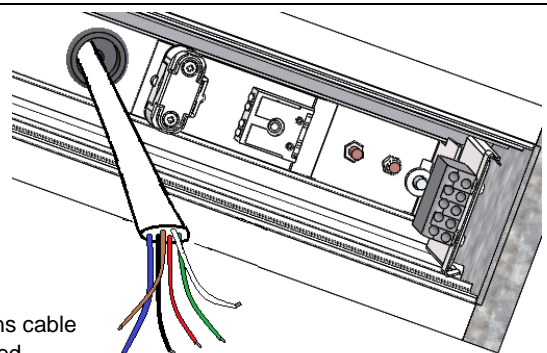


Wire mains cable into marked terminals as required.


15.

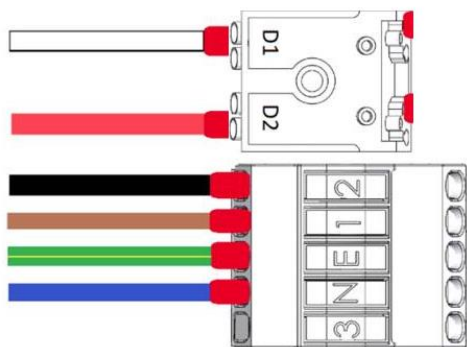

16.

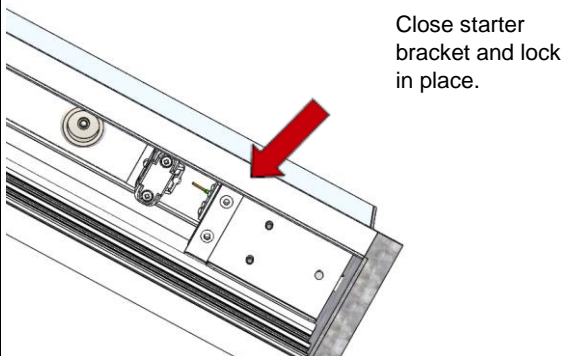


17.

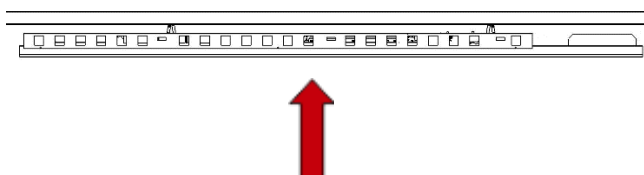


Attach gear trays to tethers inside the trunking. Allow to hang naturally.

18.

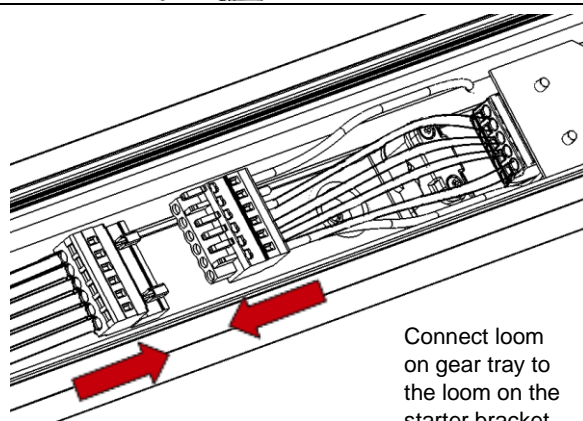


19.

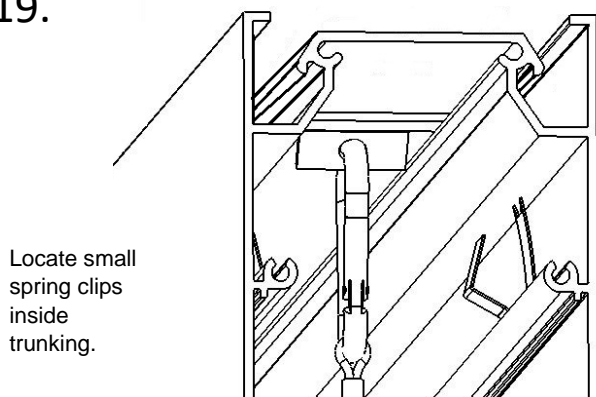

20.

NOTE: SHOWN WITHOUT END CAP FOR DEMONSTRATION PURPOSES ONLY

Lift gear tray into extrusion. Ensure there are no cables/wires trapped when fitting.

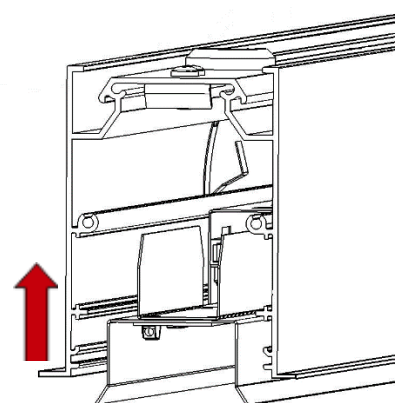

21.



Caution:

All red, green and blue can be run at the same time, however white can only be run with one additional colour. The fitting must not run all 4 colours at the same time. Drivers come programmed to prevent operation above 50% output when not connected to a DALI system, however commissioning will reset these values, we strongly recommend these values are programmed during commissioning to prevent overheating should the DALI system fail.

Under no circumstances should the LEDs in this luminaire be viewed directly, only illuminate this product with the diffuser installed. Directly viewing the LEDs in this luminaire has the potential to damage eyesight.